

COMPUTER ARCHITECTURE I

PART 5: BASIC COMPUTER ORGANIZATION AND DESIGN

Asst. Prof. Ahmed Salah Hameed

Second stage


2022-2023

INTRODUCTION

- **Every different processor has its own design**
(different registers, buses, micro-operations, machine instructions, etc)
- **Modern processor is a very complex device**
- **It contains**
 - Many registers
 - Multiple arithmetic units, for both integer and floating point calculations
 - The ability to pipeline several consecutive instructions to speed execution
 - Etc.
- **However, to understand how processors work, use a simplified processor model**

THE BASIC COMPUTER

- The Basic Computer has two components, a processor and memory
- The memory has 4096 words in it
 - $4096 = 2^{12}$, so it takes 12 bits to select a word in memory
- Each word is 16 bits long

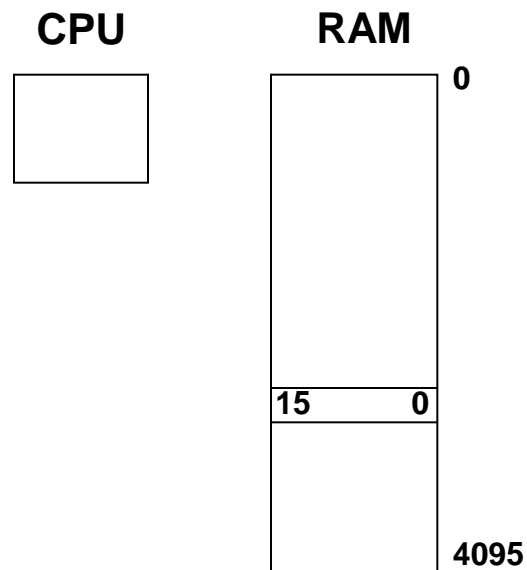


INSTRUCTIONS

- **Program**
 - A sequence of (machine) instructions
- **(Machine) Instruction**
 - A group of bits that tell the computer to *perform a specific operation* (a sequence of micro-operation)
- **The instructions of a program, along with any needed data are stored in memory**
- **The CPU reads the next instruction from memory**
- **It is placed in an *Instruction Register (IR)***
- **Control circuitry in control unit then translates the instruction into the sequence of microoperations necessary to implement it**

INSTRUCTION FORMAT



- A computer instruction is often divided into two parts
 - An *opcode* (Operation Code) that specifies the operation for that instruction
 - An *address* that specifies the registers and/or locations in memory to use for that operation
- In the Basic Computer, since the memory contains 4096 ($= 2^{12}$) words, we need 12 bits to specify which memory address this instruction will use
- In the Basic Computer, bit 15 of the instruction specifies the *addressing mode* (0: direct addressing, 1: indirect addressing)
- Since the memory words, and hence the instructions, are 16 bits long, that leaves 3 bits for the instruction's opcode

Instruction Format

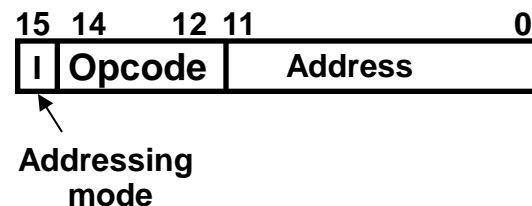

ADDRESSING MODES

- The address field of an instruction can represent either
 - Direct address: the address in memory of the data to use (the address of the operand), or
 - Indirect address: the address in memory of the address in memory of the data to use

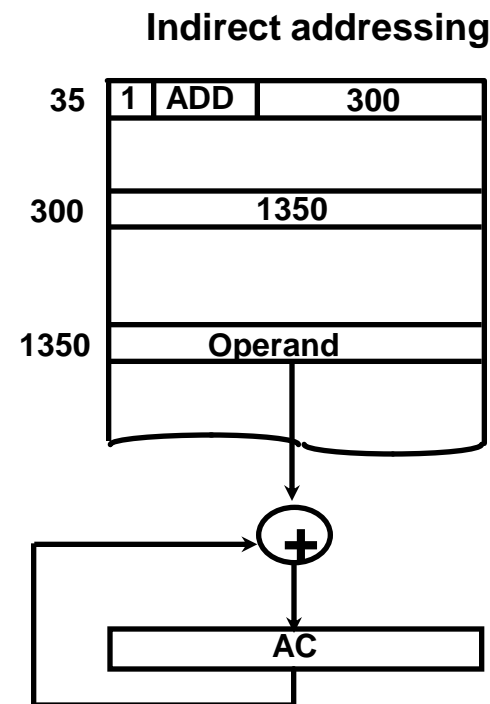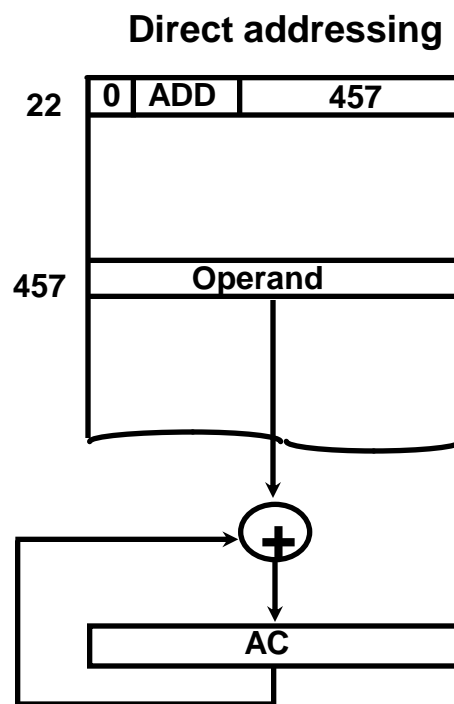

- **Effective Address (EA)**
 - The address, that can be directly used without modification to access an operand for a computation-type instruction, or as the target address for a branch-type instruction

PROCESSOR REGISTERS


- A processor has many registers to hold instructions, addresses, data, etc
- The processor has a register, the *Program Counter (PC)* that holds the memory address of the next instruction
 - Since the memory in the Basic Computer only has 4096 locations, the PC only needs 12 bits
- In a direct or indirect addressing, the processor needs to keep track of what locations in memory it is addressing: The *Address Register (AR)* is used for this
 - The AR is a 12 bit register in the Basic Computer
- When an operand is found, using either direct or indirect addressing, it is placed in the *Data Register (DR)*. The processor then uses this value as data for its operation
- The Basic Computer has a single *general purpose register* – the *Accumulator (AC)*

PROCESSOR REGISTERS

- The significance of a general purpose register is that it can be used for loading operands and storing results
 - e.g. load AC with the contents of a specific memory location; store the contents of AC into a specified memory location
- Often a processor will need a scratch register to store intermediate results or other temporary data; in the Basic Computer this is the *Temporary Register (TR)*
- The Basic Computer uses a very simple model of input/output (I/O) operations
 - Input devices are considered to send 8 bits of character data to the processor
 - The processor can send 8 bits of character data to output devices
- The *Input Register (INPR)* holds an 8 bit character gotten from an input device
- The *Output Register (OUTR)* holds an 8 bit character to be send to an output device

BASIC COMPUTER REGISTERS

Registers in the Basic Computer

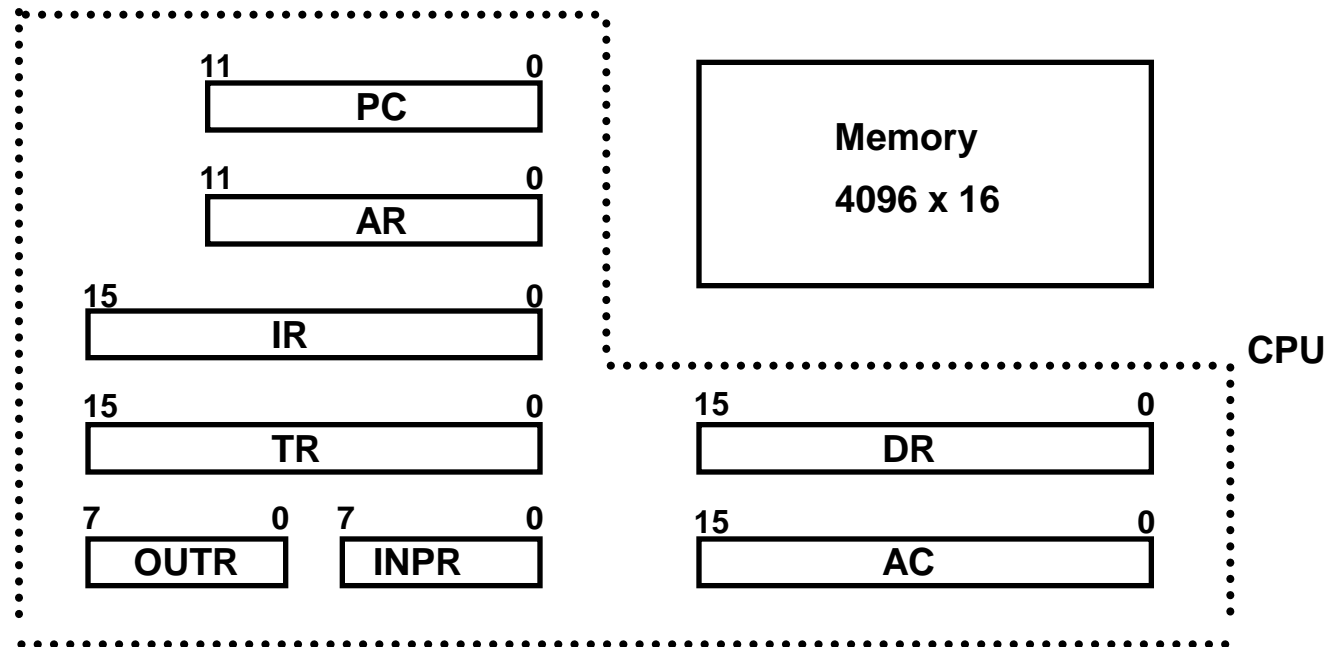


List of Registers

DR	16	Data Register	Holds memory operand
AR	12	Address Register	Holds address for memory
AC	16	Accumulator	Processor register
IR	16	Instruction Register	Holds instruction code
PC	12	Program Counter	Holds address of instruction
TR	16	Temporary Register	Holds temporary data
INPR	8	Input Register	Holds input character
OUTR	8	Output Register	Holds output character


COMMON BUS SYSTEM

- **The registers in the Basic Computer are connected using a bus**
- **This gives a savings in circuitry over complete connections between registers**

COMMON BUS SYSTEM

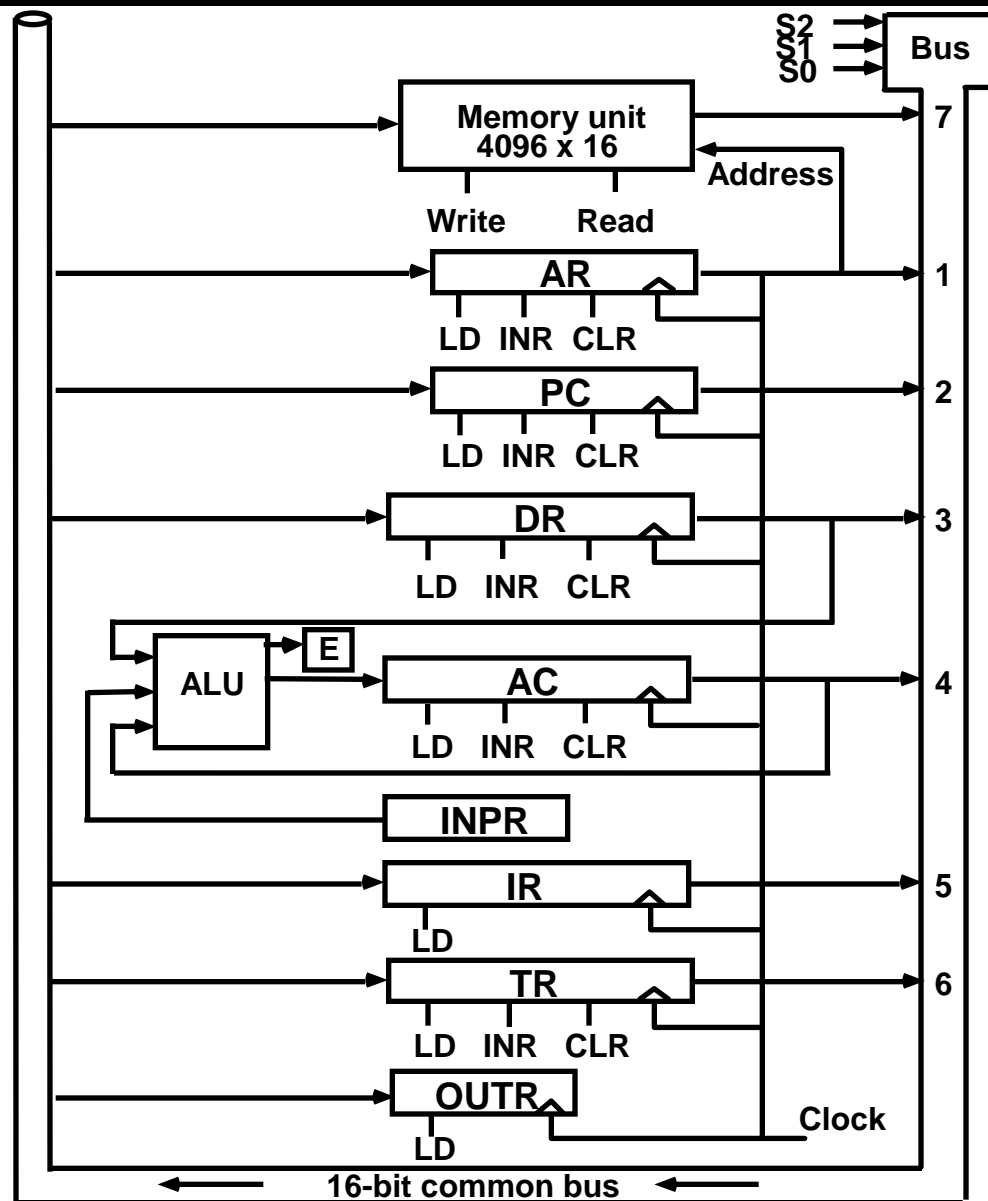

COMMON BUS SYSTEM

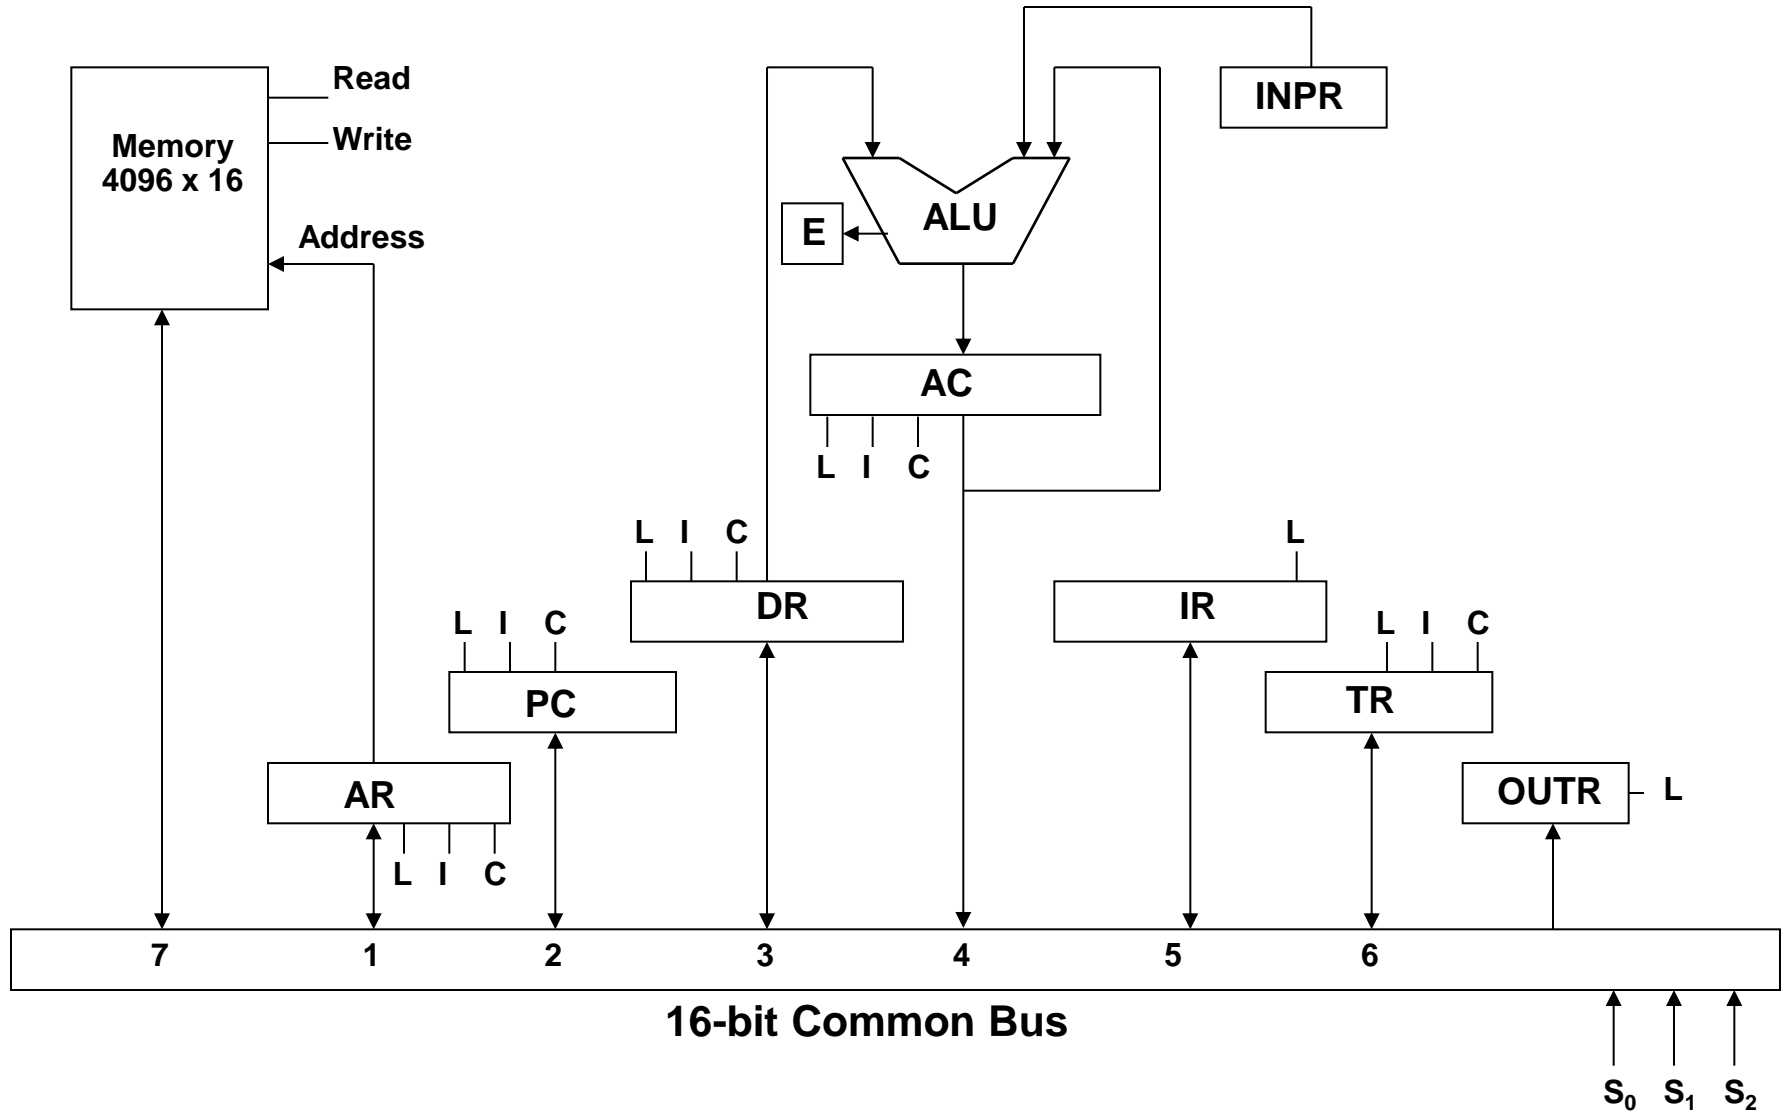

COMMON BUS SYSTEM

- Three control lines, S_2 , S_1 , and S_0 control which register the bus selects as its input

S_2	S_1	S_0	Register
0	0	0	X
0	0	1	AR
0	1	0	PC
0	1	1	DR
1	0	0	AC
1	0	1	IR
1	1	0	TR
1	1	1	Memory

- Either one of the registers will have its load signal activated, or the memory will have its read signal activated
 - Will determine where the data from the bus gets loaded
- The 12-bit registers, AR and PC, have 0's loaded onto the bus in the high order 4 bit positions
- When the 8-bit register OTR is loaded from the bus, the data comes from the low order 8 bits on the bus

BASIC COMPUTER INSTRUCTIONS

• Basic Computer Instruction Format


Memory-Reference Instructions (OP-code = 000 ~ 110)



Register-Reference Instructions (OP-code = 111, I = 0)



Input-Output Instructions (OP-code = 111, I = 1)



BASIC COMPUTER INSTRUCTIONS

Symbol	Hex Code		Description
	I = 0	I = 1	
AND	0xxx	8xxx	AND memory word to AC
ADD	1xxx	9xxx	Add memory word to AC
LDA	2xxx	Axxx	Load AC from memory
STA	3xxx	Bxxx	Store content of AC into memory
BUN	4xxx	Cxxx	Branch unconditionally
BSA	5xxx	Dxxx	Branch and save return address
ISZ	6xxx	Exxx	Increment and skip if zero
CLA	7800		Clear AC
CLE	7400		Clear E
CMA	7200		Complement AC
CME	7100		Complement E
CIR	7080		Circulate right AC and E
CIL	7040		Circulate left AC and E
INC	7020		Increment AC
SPA	7010		Skip next instr. if AC is positive
SNA	7008		Skip next instr. if AC is negative
SZA	7004		Skip next instr. if AC is zero
SZE	7002		Skip next instr. if E is zero
HLT	7001		Halt computer
INP	F800		Input character to AC
OUT	F400		Output character from AC
SKI	F200		Skip on input flag
SKO	F100		Skip on output flag
ION	F080		Interrupt on
IOF	F040		Interrupt off

INSTRUCTION SET COMPLETENESS

Set of instructions using which user can construct machine language programs to evaluate any computable function.

- **Instruction Types**

- Functional Instructions**

- Arithmetic, logic, and shift instructions
 - ADD, CMA, INC, CIR, CIL, AND, CLA (other than ADD/AND?)

- Transfer Instructions**

- Data transfers between the main memory and the processor registers
 - LDA, STA

- Control Instructions**

- Program sequencing and control
 - BUN, BSA, ISZ

- Input/Output Instructions**


- Input and output
 - INP, OUT

CONTROL UNIT

- Control unit (CU) of a processor translates from machine instructions to the control signals (for the microoperations) that implement them
- Control units are implemented in one of two ways
- **Hardwired Control**
 - CU is made up of **sequential and combinational** circuits to generate the control signals
- **Microprogrammed Control**
 - A **control memory** on the processor contains microprograms that activate the necessary control signals
- We will consider a **hardwired implementation** of the control unit for the Basic Computer

TIMING AND CONTROL

Control unit of Basic Computer

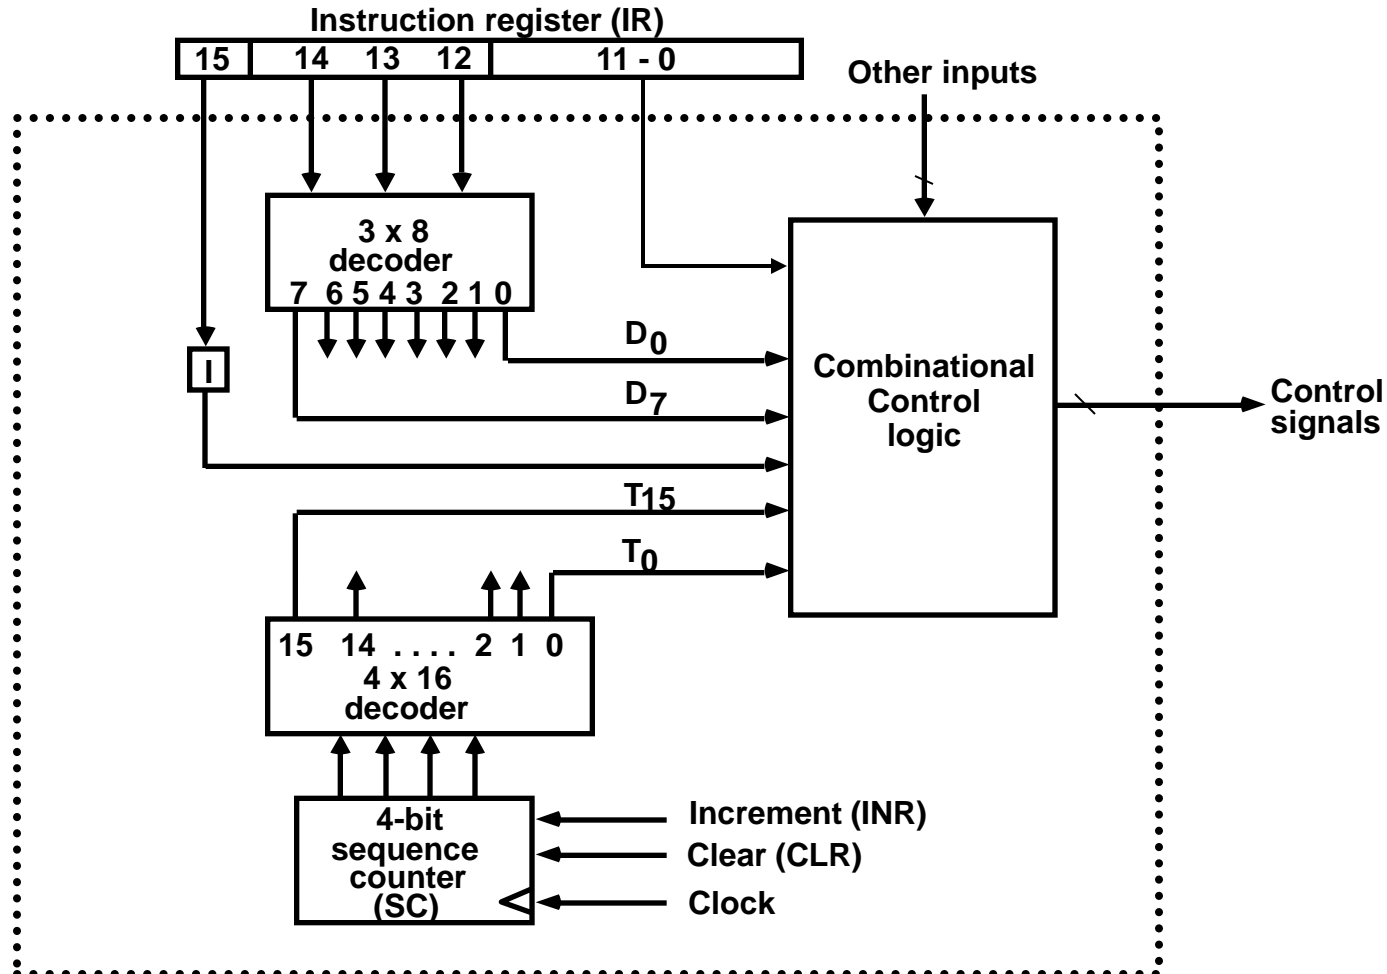

INSTRUCTION CYCLE

- In Basic Computer, a machine instruction is executed in the following cycle:
 1. **Fetch an instruction** from memory
 2. **Decode** the instruction and calculate effective **address (EA)**
 3. Read the EA from memory if the instruction has an indirect address (**Fetch operand**)
 4. **Execute** the instruction
- After an instruction is executed, the cycle starts again at step 1, for the next instruction
- **Note:** Every different processor has its own (different) instruction cycle


FETCH and DECODE

• Fetch and Decode


T0: $AR \leftarrow PC$ ($S_0S_1S_2=010, T_0=1$)

T1: $IR \leftarrow M[AR]$, $PC \leftarrow PC + 1$ ($S_0S_1S_2=111, T_1=1$)

T2: $D_0, \dots, D_7 \leftarrow \text{Decode } IR(12-14)$, $AR \leftarrow IR(0-11)$, $I \leftarrow IR(15)$

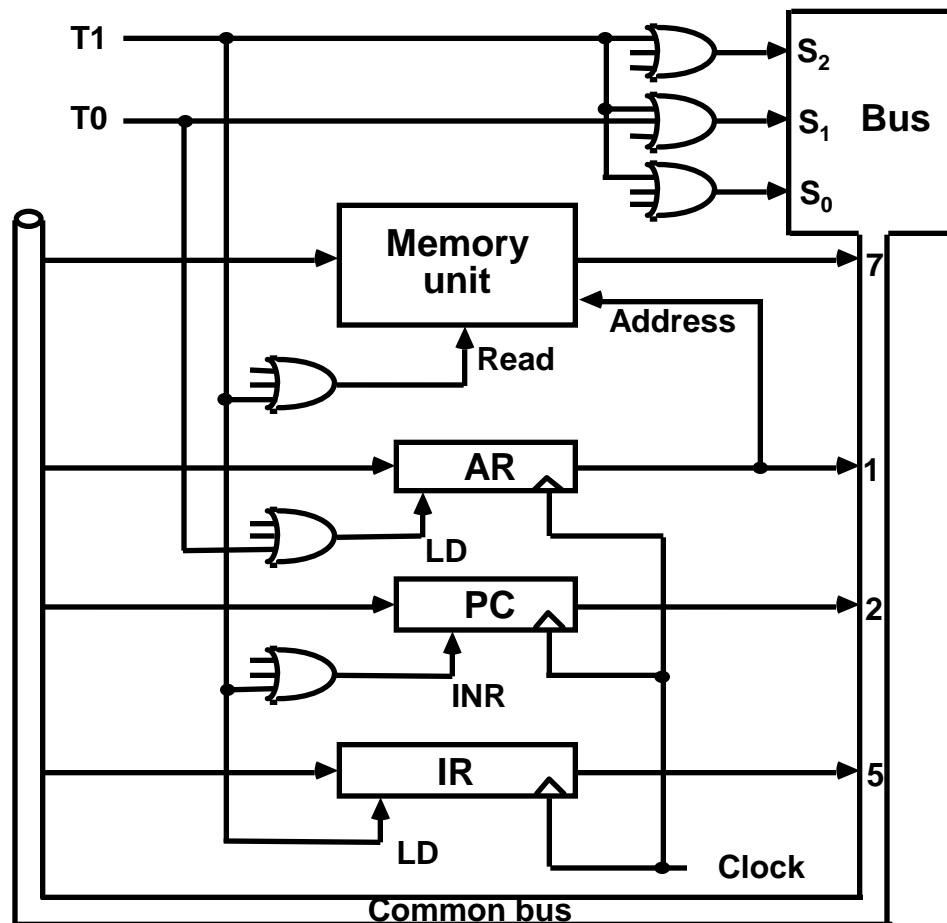

DETERMINE THE TYPE OF INSTRUCTION

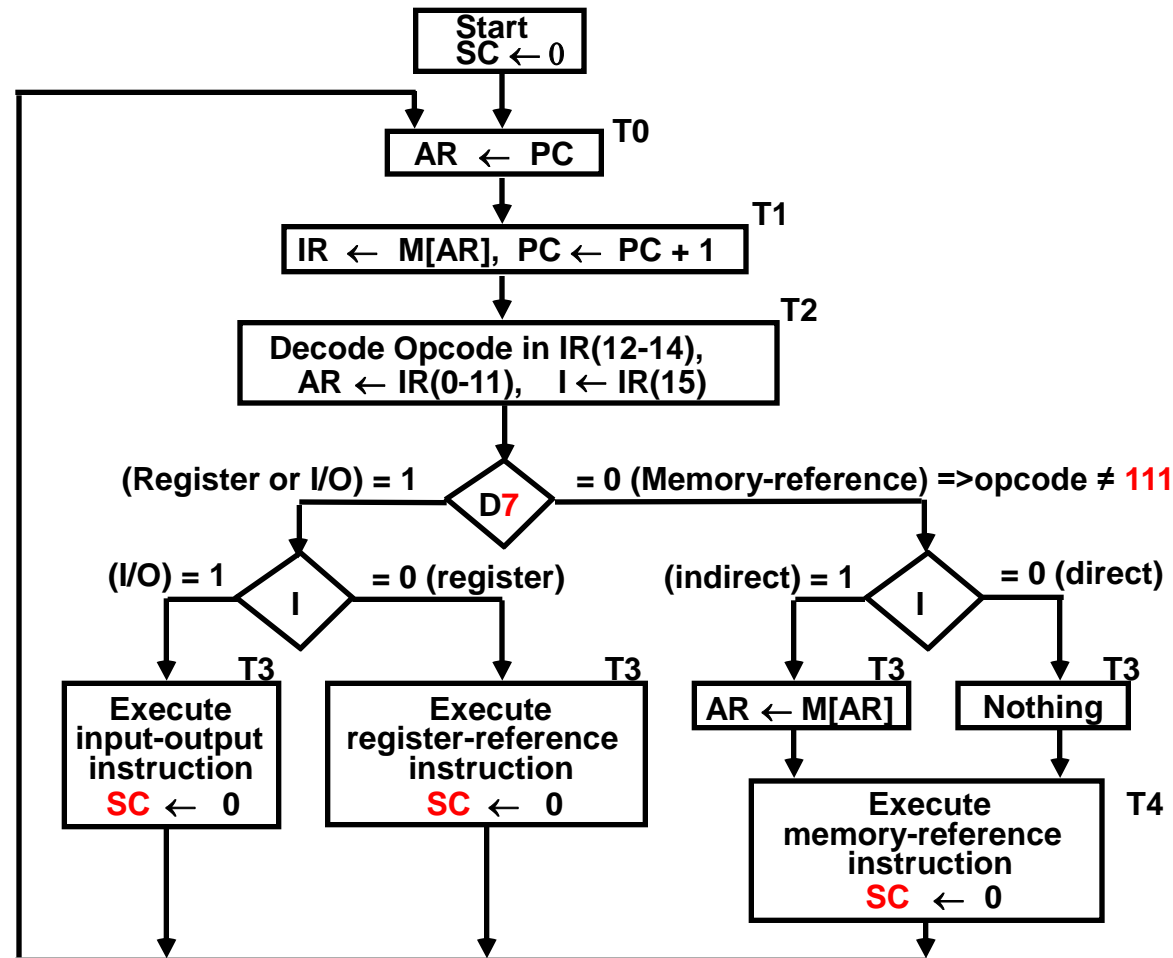


$D_7 I T_3$: $AR \leftarrow M[AR]$
 $D_7 I T_3$: Nothing
 $D_7 I T_3$: Execute a register-reference instr.
 $D_7 I T_3$: Execute an input-output instr.

INPUT-OUTPUT AND INTERRUPT

A Terminal with a keyboard and a Printer

• Input-Output Configuration

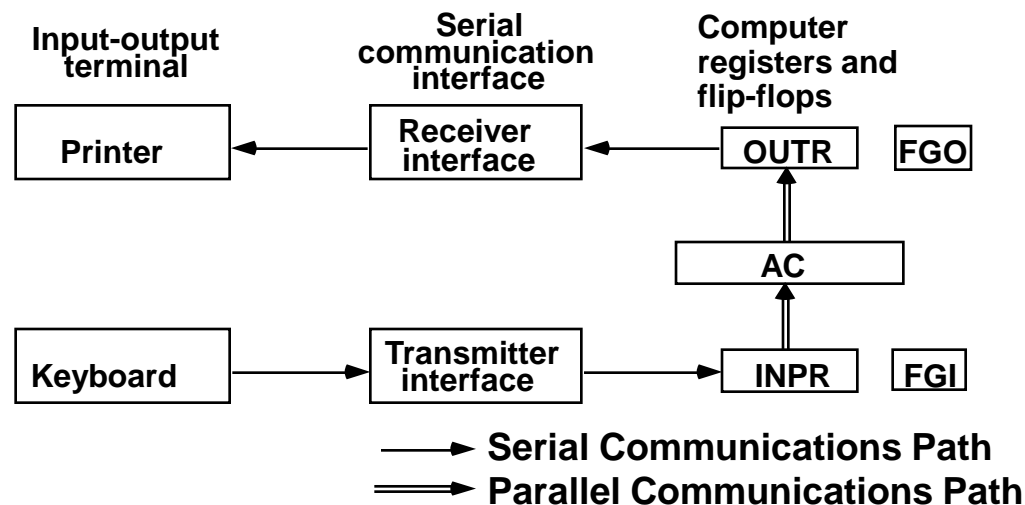

INPR Input register - 8 bits
OUTR Output register - 8 bits
FGI Input flag - 1 bit
FGO Output flag - 1 bit
IEN Interrupt enable - 1 bit


- The terminal sends and receives serial information
- The serial info. from the keyboard is shifted into INPR
- The serial info. for the printer is stored in the OUTR
- INPR and OUTR communicate with the terminal serially and with the AC in parallel.
- The flags are needed to *synchronize* the timing difference between I/O device and the computer

PROGRAM CONTROLLED DATA TRANSFER

-- CPU --

```
loop: If FGI = 0 goto loop
      AC ← INPR, FGI ← 0
```


```
/* Output */      /* Initially FGO = 1 */
loop: If FGO = 0 goto loop
      OUTR ← AC, FGO ← 0
```

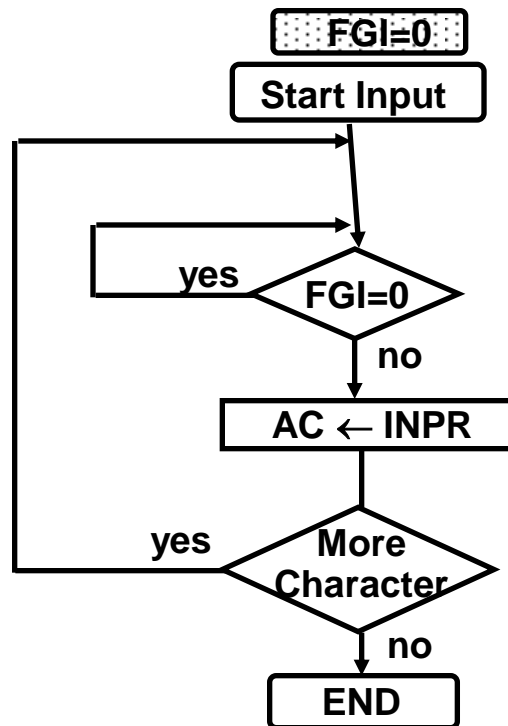

-- I/O Device --

```
/* Input */      /* Initially FGI = 0 */
loop: If FGI = 1 goto loop
      INPR ← new data, FGI ← 1
```

```
loop: If FGO = 1 goto loop
      consume OUTR, FGO ← 1
```

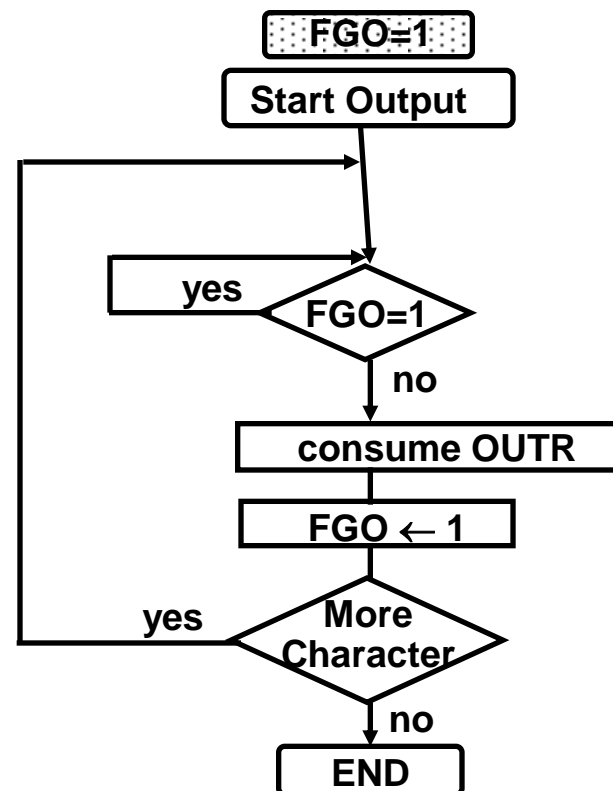


INTERRUPT INITIATED INPUT/OUTPUT

- Open communication only when some data has to be passed --> *interrupt*.
- The I/O interface, instead of the CPU, monitors the I/O device.
- When the interface finds that the I/O device is ready for data transfer, it generates an interrupt request to the CPU
- Upon detecting an interrupt, the CPU stops momentarily the task it is doing, branches to the service routine to process the data transfer, and then returns to the task it was performing.

* IEN (Interrupt-enable flip-flop)

- can be set and cleared by instructions
- when cleared, the computer cannot be interrupted


FLOWCHART FOR INTERRUPT CYCLE

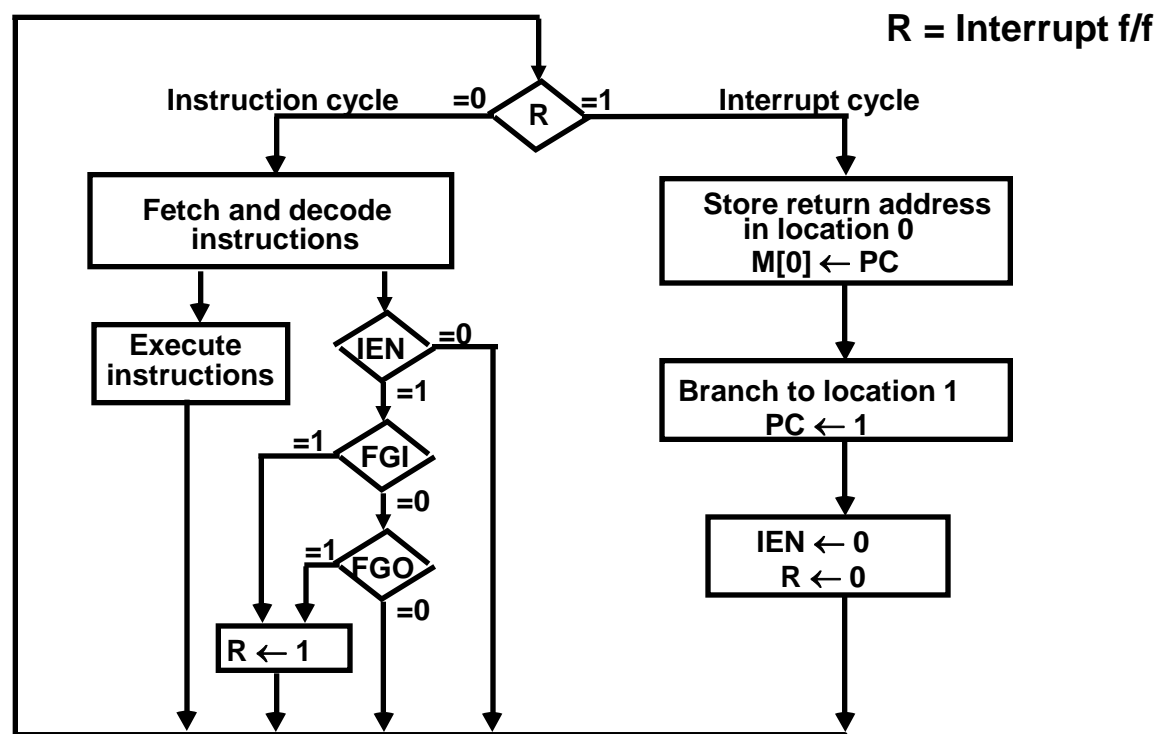

- The interrupt cycle is a HW implementation of a branch and save return address operation.
- At the beginning of the next instruction cycle, the instruction that is read from memory is in address 1.
- At memory address 1, the programmer must store a branch instruction that sends the control to an interrupt service routine
- The instruction that returns the control to the original program is "indirect BUN 0"

COMPLETE COMPUTER DESCRIPTION

Flowchart of Operations

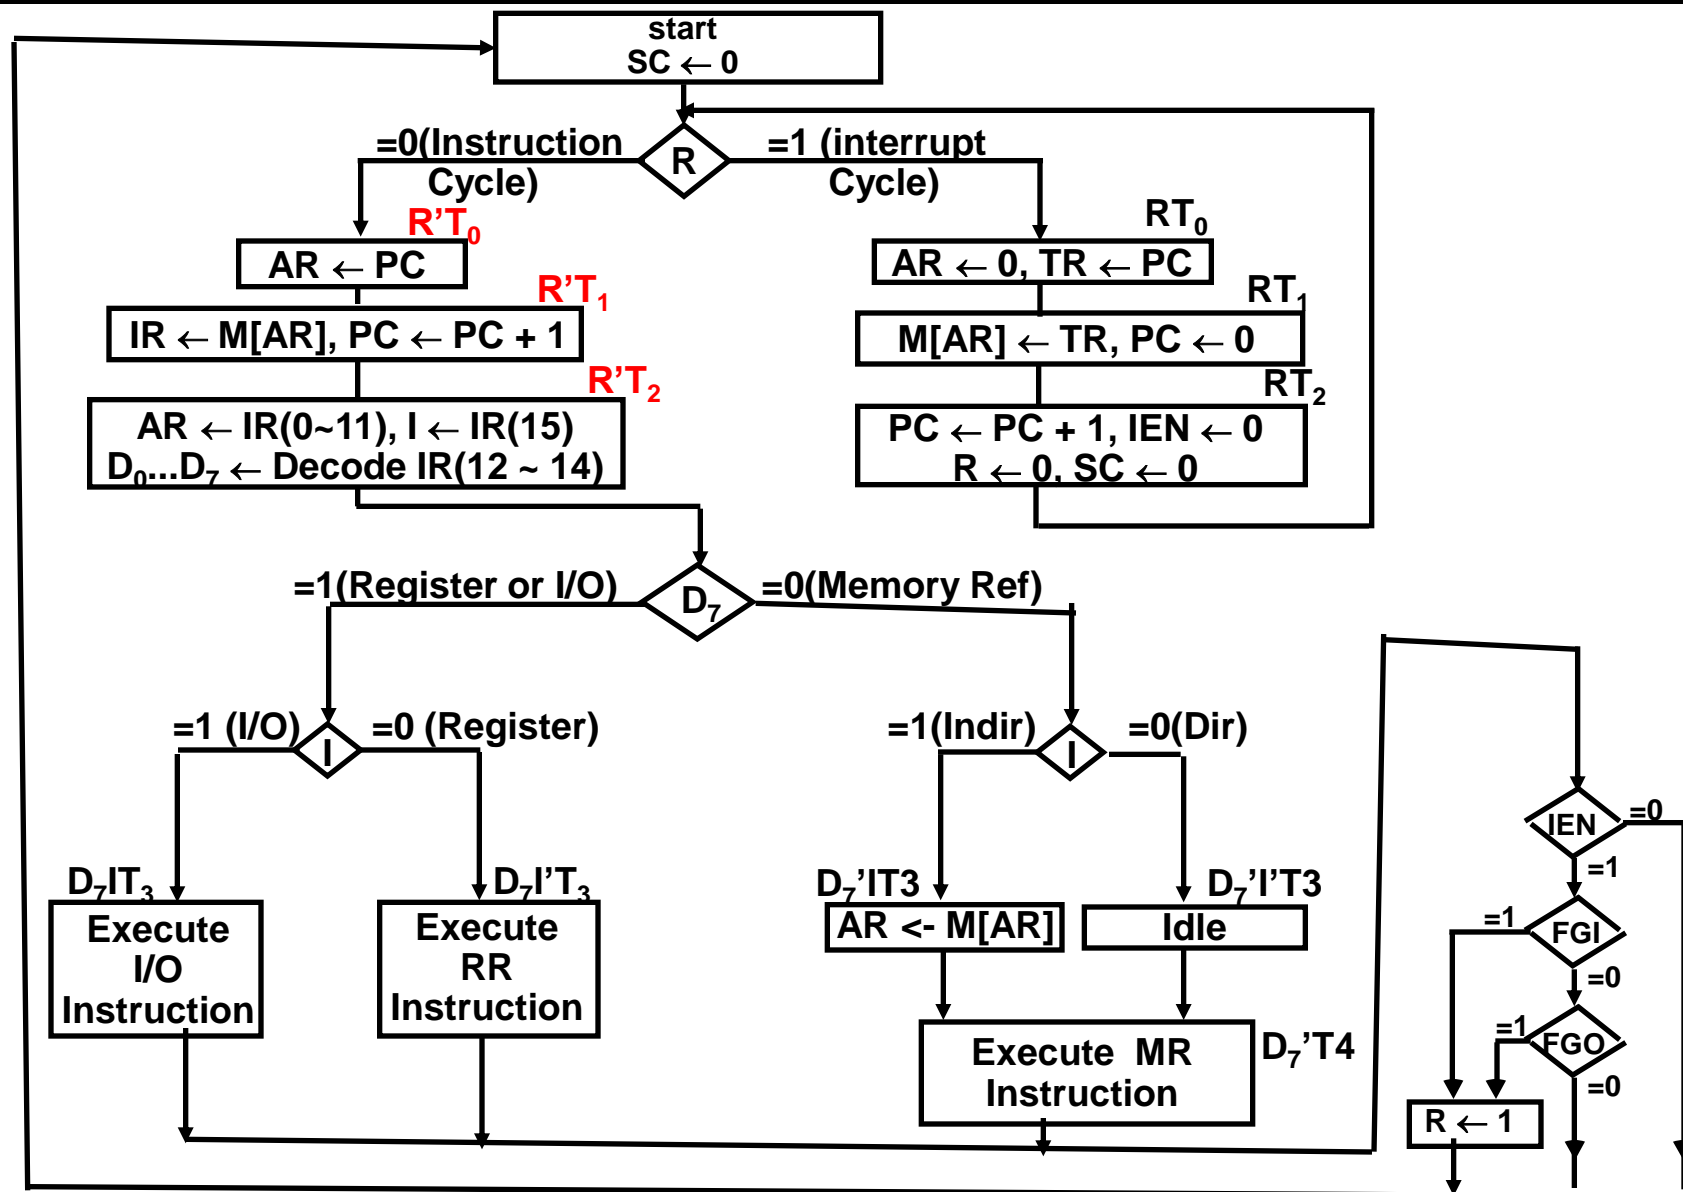

DESIGN OF BASIC COMPUTER(BC)

Hardware Components of BC

A memory unit: 4096 x 16.

Registers:

AR, PC, DR, AC, IR, TR, OUTR, INPR, and SC

Flip-Flops(Status):

I, S, E, R, IEN, FGI, and FGO

Decoders: a 3x8 Opcode decoder
a 4x16 timing decoder

Common bus: 16 bits

Control logic gates:

Adder and Logic circuit: Connected to AC

Control Logic Gates

- Input Controls of the nine registers
- Read and Write Controls of memory
- Set, Clear, or Complement Controls of the flip-flops
- S_2, S_1, S_0 Controls to select a register for the bus
- AC, and Adder and Logic circuit